


快速入門指南 惠而浦®上開式洗衣機

操作說明



警告



火災危險

請勿將沾有汽油或其他可燃性液體的衣物放入洗衣機。
任何洗衣機都無法完全清除油污。
不得烘乾曾沾染任何類型油污的衣物（包括烹飪油）。
否則可能會導致傷亡、爆炸或火災。

警告：為了降低火災、觸電或人員受傷的風險，在操作本電器之前，請先閱讀說明書中的重要安全指示。

步驟 1. 添加 HE (高效能) 洗衣劑


專門為使用 HE (高效能) 洗衣劑所設計。



附註：請參閱「添加洗衣產品」(如下)，以取得更多關於添加高效能洗衣劑、衣物柔軟精和/或漂白劑的資訊。

步驟 2. 放入衣物

 
為達到最佳效果，將需要清洗的衣物鬆散均勻地堆放在洗衣槽壁的四周。

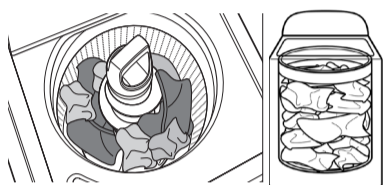


步驟 3. 按下電源按鈕以啟動洗衣機。



 
步驟 4. 選擇衣物所需的行程*

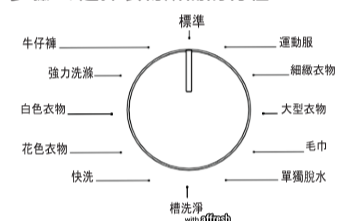


步驟 5. 視需求調整行程設定

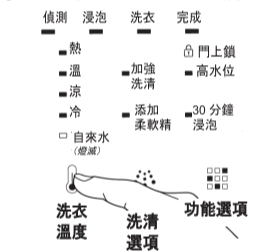 

步驟 6. 選取附加的選項功能*

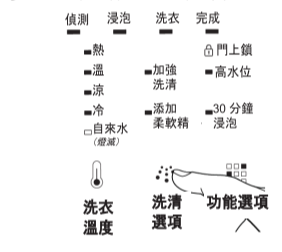 

步驟 7. 按住啟動/暫停以開始行程

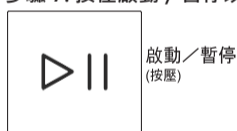 

附註：必須按住啟動按鈕 1 秒才能啟動行程。在狀態指示燈亮起後，即可放開啟動按鈕。

*不是所有型號都具備所有的行程、設定或選項。

添加洗衣產品

重要事項：使用非高效能洗衣劑可能導致洗滌時間更長和清洗效能下降，也可能導致零件故障，或隨時間滋長黴菌或發霉。高效能洗衣劑泡沫少且散佈快，產生適量之泡沫以呈現最佳洗淨效果。

將高效能洗衣劑加入洗衣槽內

將適當的高效能洗衣劑劑量，或單一劑量的洗衣球放入洗衣槽內。若使用氧系加強劑、護色漂白劑或衣物柔軟精顆粒時，先加在洗衣機的桶槽底部後，再放入衣物。

附註：請依據廠商的指示，決定洗劑產品的使用量。

添加液態氧漂白劑

請勿過量添加、稀釋或使用超過 1 杯 (236 毫升) 的量。請勿在同一行程中，同時使用護色漂白劑或氧系產品與液態氧漂白劑。

添加液態衣物柔軟精

 
若您欲於本機使用液態衣物柔軟精，建議使用 Downy Ball® 分配器。倒入適量的液態衣物柔軟精至 Downy Ball® 分配器內，用力拉緊拉環以將其封住，然後將分配器放至洗衣槽上。遵守製造商指示，根據衣物量使用適量的柔軟精。接著使用

洗滌功能選項按鈕選擇添加柔軟精。Downy Ball® 分配器會在行程中的適當時機，自動釋出衣物柔軟精。關於使用 Downy Ball® 分配器的問題，請上網 www.downy.com。

手動添加液態衣物柔軟精

啟動行程前，請先選擇控制面板上的添加柔軟精選項。在最後洗滌時，請等候洗衣機完成注水過程，按下啟動/暫停鍵以暫停。掀起機門，加入建議的液態衣物柔軟精的量。蓋上機門，並按住啟動/暫停鍵以繼續行程。

操作面板與功能

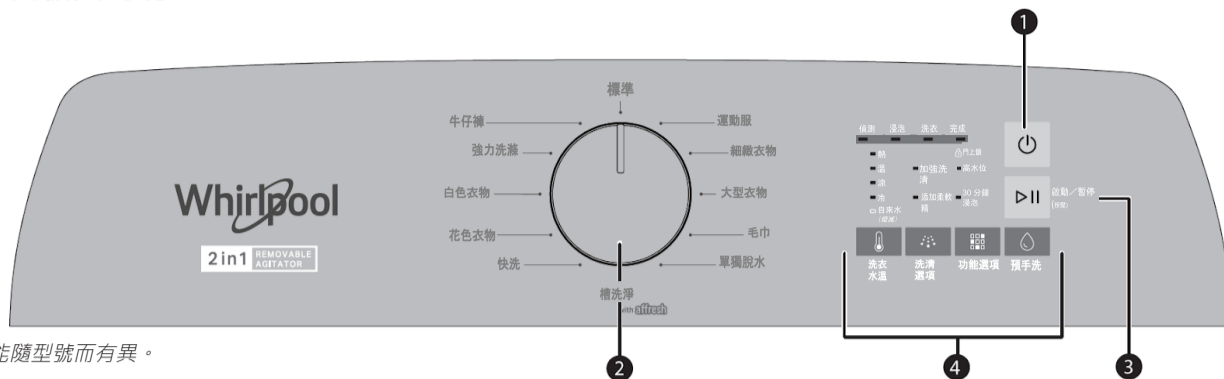

*外觀可能隨型號而有異。

1 電源

按下可開啟 / 關閉或停止 / 取消行程。

2 行程旋鈕

轉動旋鈕，選擇所需的行程。

3 啟動 / 暫停

按住啟動 / 暫停按鈕 1 秒，所有狀態指示燈都亮起時即可放開，以啟動行程。如在行程期間按下，可暫停行程並解鎖機門。
附註：若機器仍在旋轉中，需要較長的時間解鎖機門。

4 行程修改選項 (並非所有行程都適用)

洗衣水溫

按下可調整行程的溫度 (自來水、冷、涼、溫或熱)。
附註：按下洗衣水溫按鈕，會在可用的溫度選項中循環切換。若溫度欄沒有燈光亮起，則選擇的溫度為自來水。

洗滌功能選項

按下可調整行程的可用洗滌功能選項。按一次會選擇添加柔軟精，按兩次會選擇加強洗滌，按三次為兩項同時選擇。

添加柔軟精

選擇此選項讓機器知道您已添加液態衣物柔軟精。

加強洗滌

選擇此選項以增加第二次洗滌行程。

功能選項

按下可為各個行程新增或移除選項。按一次會增加 30 分鐘浸泡，按兩次會啟用高水位，按三次則為兩項同時選用。

高水位

使用此選項以替您的洗滌行程自動增加更多水量。您也能使用此選項降低清洗深色衣服時，出現白色殘留物的可能性。

30 分鐘浸泡

按下以加入 30 分鐘的浸泡時程，以助於去除頑固汗漬。洗衣機將注入清水，然後暫停動作以進入浸泡程序，之後開始所選行程。

預手洗

 
按下以立即使用水柱。使用此功能以直接於洗衣機內，進行衣物或其他洗滌物的預處理動作。您也能使用此功能手動增加所需水量。

附註：洗衣機若在行程開始前偵測到大量水量，會先將水排光以確保機器能正確地感應衣物量。

附註：若洗衣機偵測到不平衡的情況，可能會將行程暫停然後嘗試平均分散衣物載重。在此期間，偵測和洗衣狀態指示燈會同時短暫亮起。

警告：切勿洗滌防水或防潑水型衣物。未能遵守這些指示，可能導致人身傷害、財物損失和/或機器損壞的異常震動和失衡狀況。

可拆卸之 2 合 1 攪拌棒

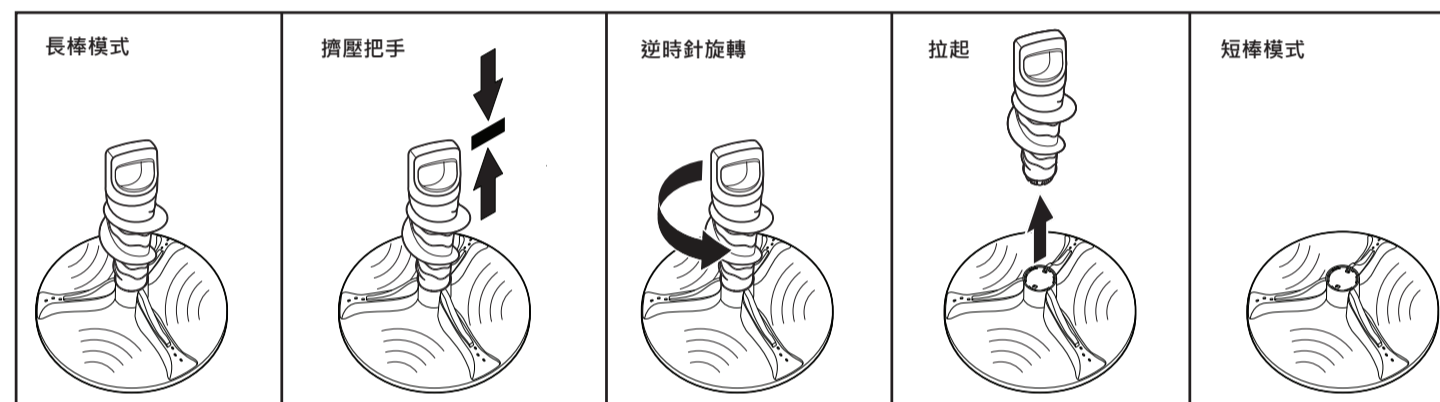

■ 想要增加機械作用力以去除和清洗微量塵土髒汙時，可維持把手插入狀態 (長棒模式)。此模式適合日常混合衣物的洗滌條件。

 
■ 當您需要更多空間或欲徹底溫和清潔時，可將把手拿出 (短棒模式)。此模式特別適合寢具等大型衣物、或內衣等細緻衣物的洗滌條件。

使用可拆卸攪拌棒

- 扭轉把手、逆時針旋轉然後拉起以拆卸。
- 向下壓然後順時針旋轉以重新安裝。攪拌棒應鎖住至定位。


需要詳細的安裝說明和維護資訊、冬季存放以及運輸提示時，請參閱機器隨附的使用說明書。

選擇適合的行程

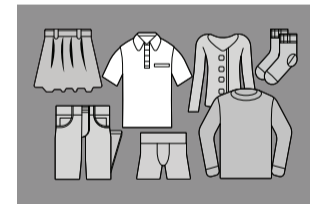


在 www.whirlpool.com.tw 可找到線上的洗衣機行程指南。該文件可協助您了解各種衣物類型應選擇的行程及預設行程選項。例如，棉質、亞麻及混合衣物，建議使用溫水標準行程。

 洗衣行程前的預處理

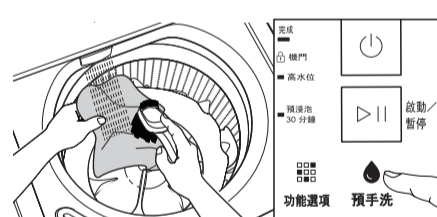

- 按一次預手洗按鈕會開啟注水，然後再按一次會關閉。
- 預手洗會在 10 分鐘後、或達到滿水位時自動關閉。
- 若水位過高，會自動排水。若機門保持開啟 10 分鐘後或保持關閉 3 小時後，也會自動排水。

 
在需要時注入更多水量

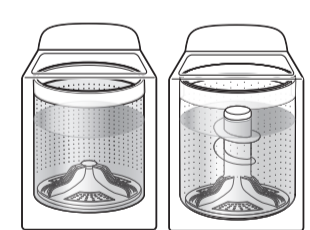

自動感應和高水位

- 洗衣機會依所偵測到的衣物量，將水位調整至高效率洗衣的最佳用量。
- 按下高水位以替您的洗滌行程自動增加更多水量。
- 建議使用大型衣物行程搭配高水位功能選項，以滿足衣物量所需的最大水量。
- 使用高水位功能選項時，因增加注水時間的緣故，行程時間會較長。

 更省水地清潔

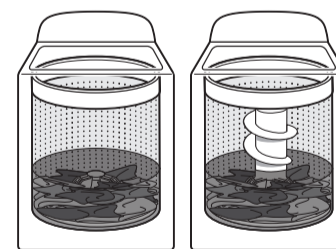

此洗衣機經過設計與優化，能以更省水的方式達到徹底清潔，同時節約能源。當洗衣機浸潤並轉動衣物時，衣物的堆疊面會在洗衣槽內呈現較低的狀態。此為正常現象，不代表應該要放入更多衣物。
重要事項：此機型不會有舊型、低效率洗衣機的洗衣槽滿水位情況。部分衣物露出於水位線之上為正常現象。

協助或服務及其他資訊

需要下列任何項目的資訊、完整行程指南、詳細產品尺寸，或完整的使用和安裝說明，請造訪 www.whirlpool.com.tw。可節省安排維修服務的費用。

註冊產品	安排維修	操作方式和常見問題	手冊和下載	增加服務方案	零件	配件
<p>型號與序號標籤位置</p>		<p>需要諮詢客服或有其他疑問時，請撥打免付費電話 0800-258-558 或請來信至 service_tw@whirlpool.com。</p>				

QUICK START GUIDE

WHIRLPOOL® TOP LOADING WASHING MACHINE

OPERATING INSTRUCTIONS

WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

STEP 1. ADD HE DETERGENT

 
Designed to use only HE (High Efficiency) detergents.



NOTE: See ADDING LAUNDRY PRODUCTS (below) for more information on adding HE detergent, fabric softener, and/or bleach.

STEP 2. LOAD CLOTHES


For best results, load garments in loose heaps evenly around the basket wall.

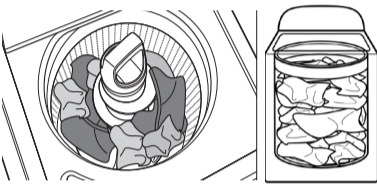


STEP 3. PRESS POWER TO TURN ON THE WASHER



 
STEP 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

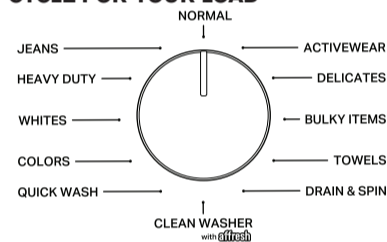

 
STEP 5. ADJUST CYCLE SETTINGS, IF DESIRED

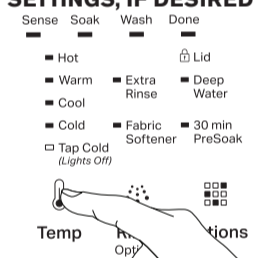

 STEP 6. SELECT ADDITIONAL OPTIONS*

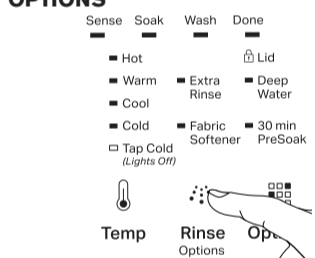

 STEP 7. PRESS AND HOLD START/PAUSE TO BEGIN CYCLE

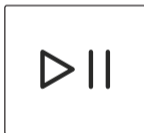

Hold to Start

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.

*Not all cycles, settings or options are available with all models.

 
ADDING LAUNDRY PRODUCTS

IMPORTANT: Using non-HE detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component malfunction and, over time, buildup of mold or mildew. HE detergents should be low-sudsing and quick-dispersing to produce the right amount of suds for the best performance.

ADDING HE DETERGENT TO BASKET


Add a measured amount of HE detergent or single-dose laundry packets into the basket. If using oxi-type boosters, color-safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes.

NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.

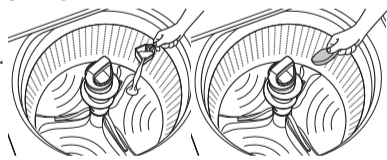


ADDING LIQUID CHLORINE BLEACH

 Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or oxi products in the same cycle with liquid chlorine bleach.

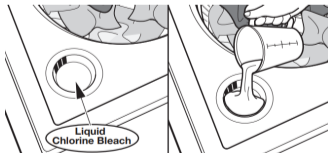

ADDING LIQUID FABRIC SOFTENER

 If you desire to use liquid fabric softener with this washer, Whirlpool suggests using the Downy Ball® dispenser. Pour a measured amount of liquid fabric softener into the Downy Ball® dispenser, pull the ring tightly to seal it, and place on top of load. Follow manufacturer's directions for correct amount of fabric softener based on your load size. Then use the Rinse Options button to select Fabric Softener. The Downy Ball® dispenser will automatically release the fabric softener at the correct time in the cycle. For questions on using the Downy Ball® dispenser visit www.downy.com.

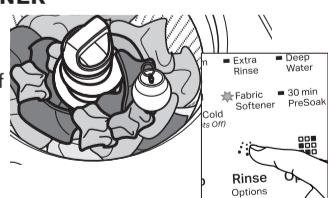

ADDING LIQUID FABRIC SOFTENER MANUALLY

Select the Fabric Softener option on the control panel before starting a cycle. During the final rinse, wait until the washer has completed filling, press the Start/Pause button to pause the washer. Lift the lid and add the recommended amount of liquid fabric softener. Close the lid, press and hold the Start/Pause button to resume the cycle.

CONTROL PANEL AND FEATURES



*Appearance may vary depending on model.

1 POWER

Press to turn on/off or to stop/cancel a cycle.

2 CYCLE KNOB

Turn knob to select desired cycle.

3 START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle and unlock lid.

NOTE: If machine is spinning it may take longer to unlock lid.

4 CYCLE MODIFIERS (Not all modifiers are available on all cycles)

TEMP

Press to modify the cycle's available temperatures (Tap Cold, Cold, Cool, Warm, or Hot).

NOTE: Pressing Temp will toggle through available temperature options. When no lights in the temperature column are illuminated the selected temperature is Tap Cold.

RINSE OPTIONS

Press to modify the cycle's available rinse options. Press once for Fabric Softener, twice for Extra Rinse and three times to activate both.

FABRIC SOFTENER

Select this option to let the machine know when you have added liquid fabric softener.

EXTRA RINSE

Select this option to add a second rinse.

OPTIONS

Press to add or remove options for each cycle. Press once to add a 30 min PreSoak, twice to activate Deep Water and three times for both.

DEEP WATER

Use this option to automatically add more water to your wash cycle. You can also use this option to reduce the likelihood of white residue on dark clothing.

30 MIN PRESOAK

Touch to add a 30 minute presoak period to help loosen tough stains. The washer will fill, pause to soak, and then begin the selected cycle.

FAUCET

 
Press to access an instant water stream. Use this feature to pretreat clothes and other items right in the washer. You can also use this feature to manually add water to the machine as desired.

NOTE: The washer will drain at the beginning of the cycle if a large volume of water is detected to ensure the machine can correctly sense the load size.

NOTE: If the washer detects an out-of-balance condition it may pause and attempt and re-distribute the load. During this time the Sense and Wash status indicators will both briefly illuminate.

WARNING: Do not wash water-resistant or water repellant-type clothing. Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

2-IN-1 REMOVABLE AGITATOR

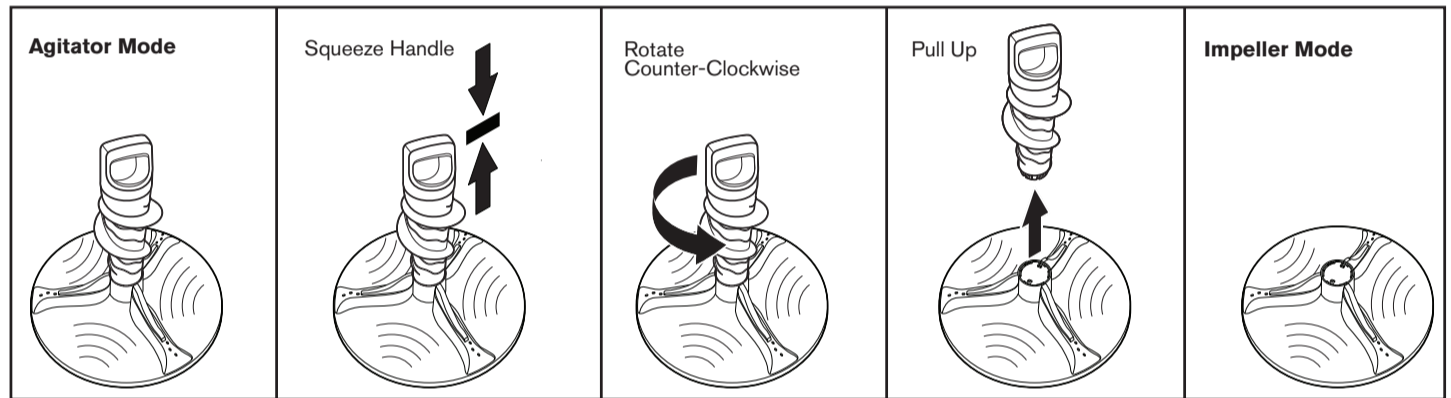


■ Keep it in (Agitator mode) when you want increased mechanical action to remove and rinse away loose soils. You can use this mode anytime but it's especially suited for everyday mixed loads.
■ Take it out (Impeller mode) when you need added space and/or a thorough, gentle clean. You can use this mode anytime but it's especially suited for bulky items such as bedding and delicate items such as undergarments.

USING THE REMOVABLE AGITATOR

■ Squeeze handle, rotate counter-clockwise, and pull up to remove.
■ Push down and rotate clockwise to re-install. The agitator should lock into place.


For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

 CHOOSING THE RIGHT CYCLE

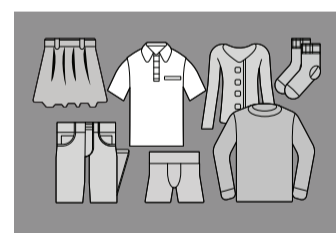


A cycle guide for your washer can be found online at www.whirlpool.com.tw. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the NORMAL cycle with Warm water for cottons, linens and mixed-garment loads.

 PRE-TREATING BEFORE A WASH CYCLE

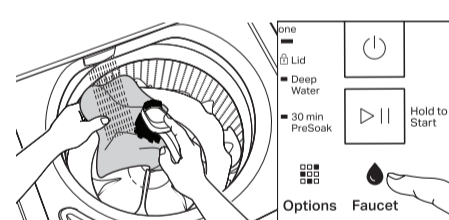

■ Press the Faucet button once to turn on and press again to turn off.
■ Faucet will automatically shut off after 10 minutes or when max water level is reached.
■ Water will automatically drain if water level becomes too high. Water will also drain after 10 minutes if the lid is left open or 3 hours if the lid is left closed.

 
MORE WATER WHEN YOU WANT IT

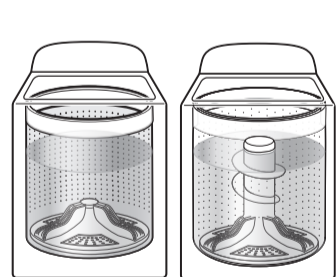

AUTO SENSING AND DEEP WATER

■ The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
■ Press Deep Water to automatically add more water to your wash cycle.
■ It is recommended to use BULKY ITEMS cycle with Deep Water option for loads where maximum water level is desired.
■ Expect longer cycle times due to extended fill duration when using the Deep Water option.

 CLEANING WITH LESS WATER

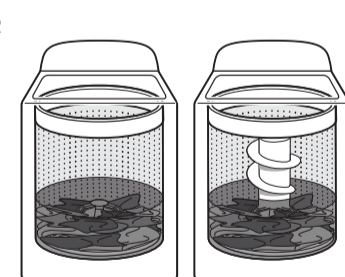

The washer has been designed and optimized to provide a thorough cleaning using less water to conserve energy and resources. As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.
IMPORTANT: You will not see a full basket of water as with older, less efficient washing machines. It is normal for some of the load to be above the water line.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, detailed product dimensions, or for complete instructions for use and installation, please visit www.whirlpool.com.tw. This may save you the cost of a service call.

Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
<p>Model & Serial Number Tag location</p>		<p>To speak with a customer service representative or if you have additional questions, call us toll free at 0800-258-558 or email us at service_tw@whirlpool.com.</p>				